


LAG-XX-1200 LINEAR ACTUATOR

ACTUATOR INTERNALS

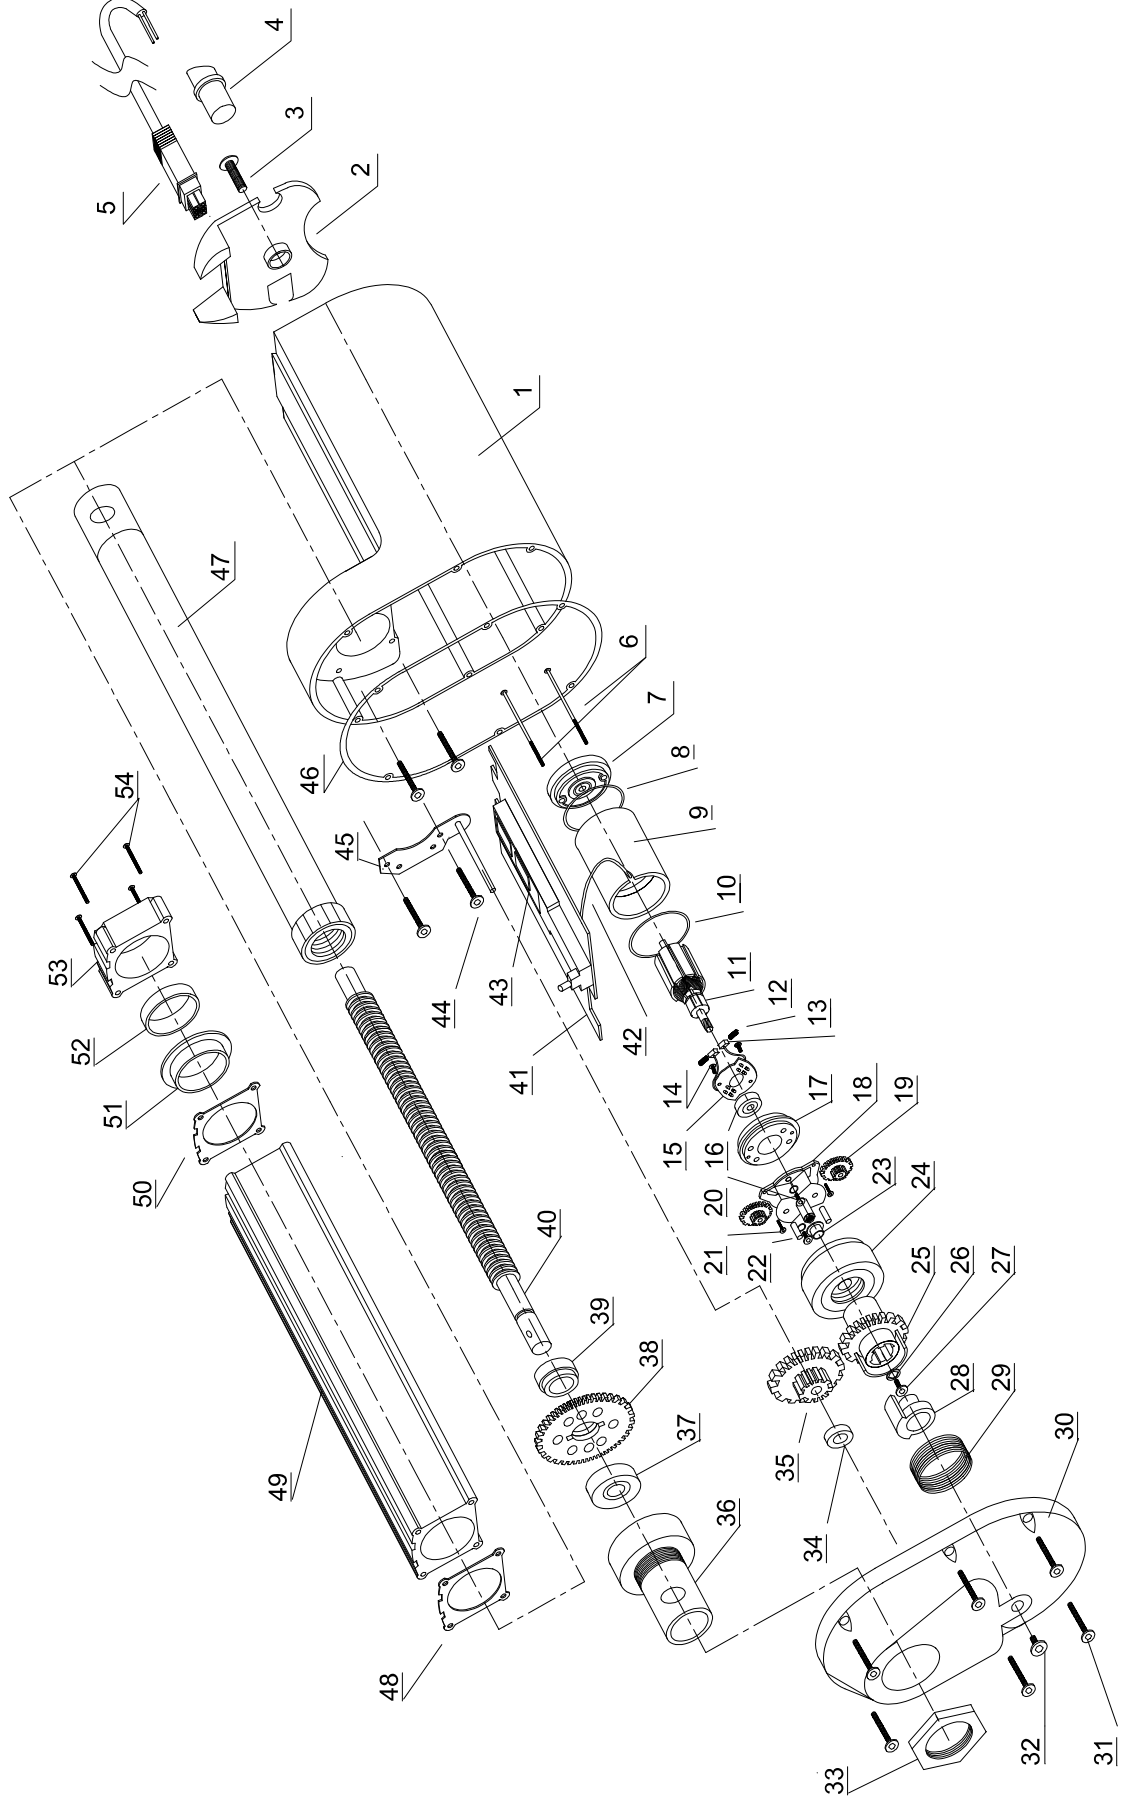

ACTUATOR ASSEMBLY EXPANDED VIEW PARTS DESCRIPTION

Item	Description	Qty
1	Actuator Enclosure	1
2	Back Cover	1
3	Back Cover Screw	1
4	Optional Connector Plug	1
5	Power Cable with Connector	1
6	Motor Enclosure Screw	2
7	Electric Motor Cap with Rotor Bearing	1
8	Electric Motor Top Gasket	1
9	Electric Motor Enclosure with Stator	1
10	Motor Enclosure Bottom Gasket	1
11	Electric Motor Rotor	1
12	Electric Motor Brush Spring	2
13	Electric Motor Brush	2
14	PCB Screws	2
15	Brush Holder PCB	1
16	Electric Motor Bearing	1
17	Electric Motor Base	1
18	Direct Gear Wheel Bracket	1
19	Direct Gear Wheel	2
20	Direct Gear Bracket Screw	2
21	Electric Motor Mounting Screw	2
22	Direct Gear Pin	2
23	Direct Drive Washer	1
24	Direct Drive Drum	1
25	Main Drive Gear	1
26	Main Drive Gear Washer	1
27	Main Drive Gear Screw	1

Item	Description	Qty
28	Main Drive Engager	1
29	Main Drive Spring	1
30	Actuator Back Cover	1
31	Back Cover Screw	6
32	Main Drive Screw	1
33	Mounting Bracket Nut	1
34	Gear Spacer	1
35	Intermediate Gear Wheel	1
36	Actuator Bottom Mounting Bracket	1
37	Main Shaft Bearing	1
38	Main Shaft Gear Wheel	1
39	Main Shaft Spacer	1
40	Treaded Shaft Drive	1
41	Limit Switches PCB	1
42	Electric Motor Cable	1
43	Limit Switches	2
44	Shaft Enclosure Screw	4
45	Intermediate Gear Support	1
46	Enclosure Gasket	1
47	Shaft	1
48	Shaft Enclosure Bottom Gasket	1
49	Shaft Enclosure	1
50	Shaft Enclosure Top Gasket	1
51	Top Shaft Guide	1
52	Shaft Top Seal Ring	1
53	Shaft Enclosure Top Cap	1
54	Shaft Enclosure Top Cap Screw	4